Kirb-Perfect®

Instructions for membrane wrapped curb

Be sure liner is installed according to all ANSI specifications and Plumbing codes.

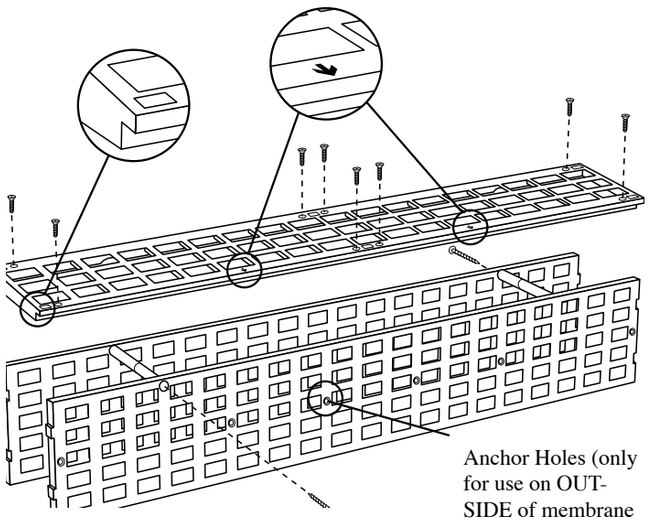

Anchor Holes (only for use on OUT-SIDE of membrane wrapped 2 x 4s)

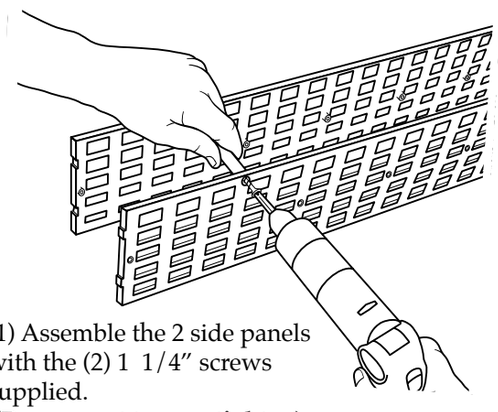

(1) Assemble the 2 side panels with the (2) 1 1/4" screws supplied.
(Be sure not to over tighten)

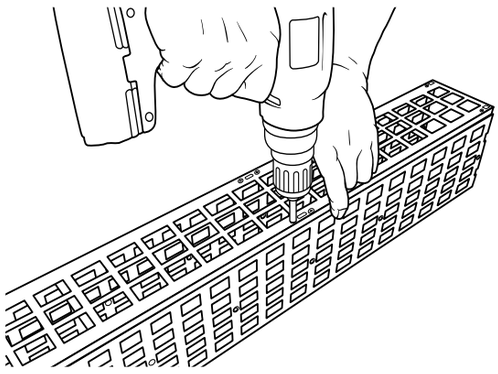

(2) Attach top panel to assembled side panels using the (8) 3/4" stainless self-tapping screws supplied.
(Be sure the arrows on top panel are pointed to inside of the shower. Do not over tighten.)

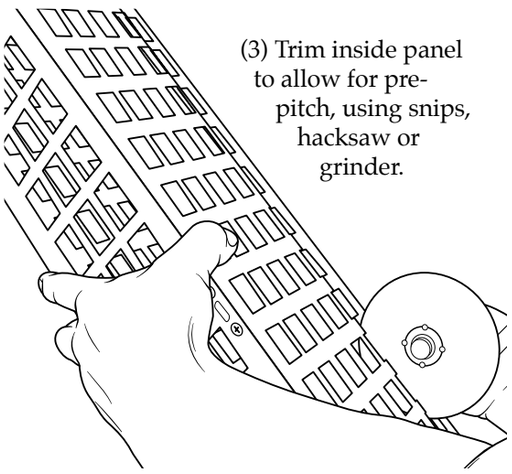

(3) Trim inside panel to allow for pre-pitch, using snips, hacksaw or grinder.

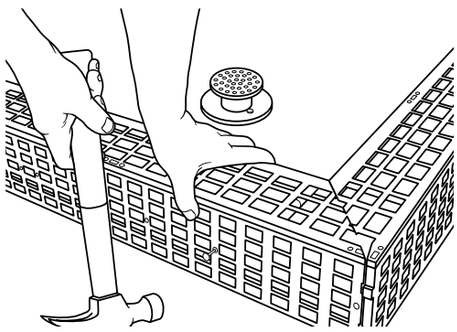

(4) Fit assembled curb over membrane wrapped 2x4s, attach with galvanized nails (not supplied) to the exterior only.
(Caution: Do not nail to inside of curb, doing so will jeopardize the integrity of the liner!)

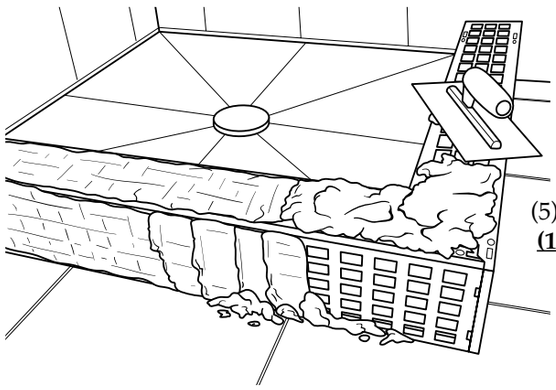

(5) Pack and fill side and top panels of attached curb with mud.
(1 part Portland cement to 4 parts clean sand.)

(6) Let curb dry over night and use a latex modified mortar to set tile.

Manufactured by:
MARK E INDUSTRIES
855 Dunbar Ave., Oldsmar, FL 34677
Toll Free: 1-866-771-9470
http://www.goofproofshowers.com
e-mail: *info@markeindustries.com*

LIFETIME WARRANTY - Mark E Industries, Inc. warrants that Kirb-Perfect® products are free from defects in materials and workmanship. Warranty does not cover damage due to obvious misuse, abuse or modification. We will repair or replace without charge, at our option, any part that should prove defective. Part(s) must be returned, freight prepaid, with proof of purchase.

Kirb-Perfect®

Instrucciones para el bordillo con membrana

Asegúrese de que el forro se instale de acuerdo a las especificaciones ANSI y los códigos de plomería.

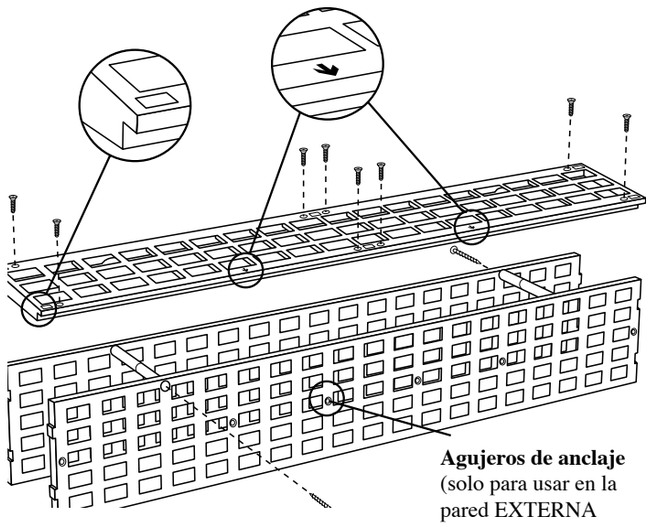

Agujeros de anclaje (solo para usar en la pared EXTERNA de la membrana de 2 x 4s)

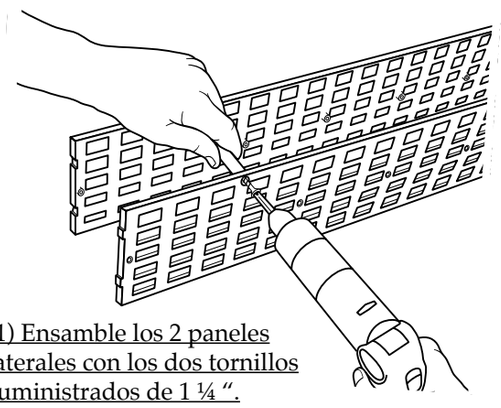

(1) Ensamble los 2 paneles laterales con los dos tornillos suministrados de 1 ¼ ". **(Asegúrese de no apretarlos demasiado)**

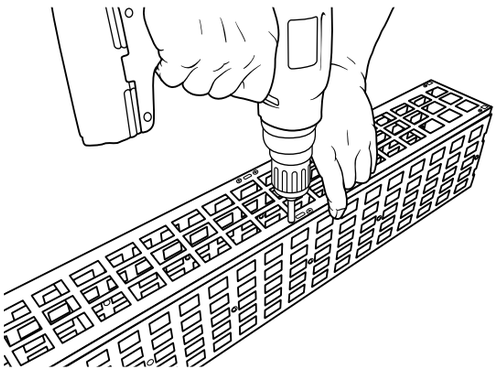

(2) Sujete el panel superior a los paneles laterales ensamblados, usando los (8) tornillos autorroscantes de acero inoxidable de 3/4" suministrados. **(Asegúrese que las flechas del panel superior apunten hacia el interior de la ducha. No los apriete demasiado.)**

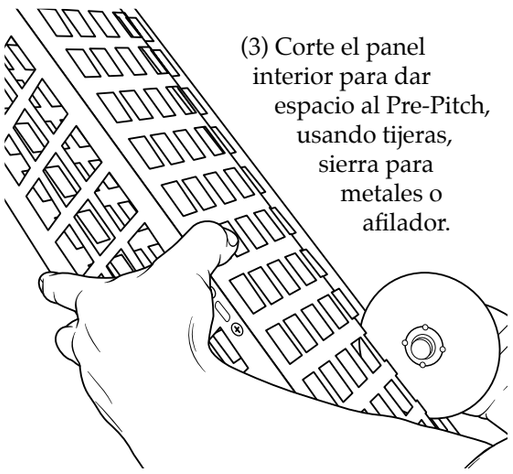

(3) Corte el panel interior para dar espacio al Pre-Pitch, usando tijeras, sierra para metales o afilador.

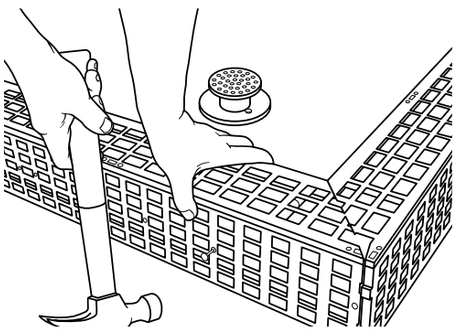

4) Ajuste el bordillo ensamblado sobre la membrana de 2x4s y sujételo con clavos galvanizados (no suministrados), solamente al exterior. **(Advertencia: ¡No clave hacia el interior del bordillo, pues puede dañar la integridad del forro!)**

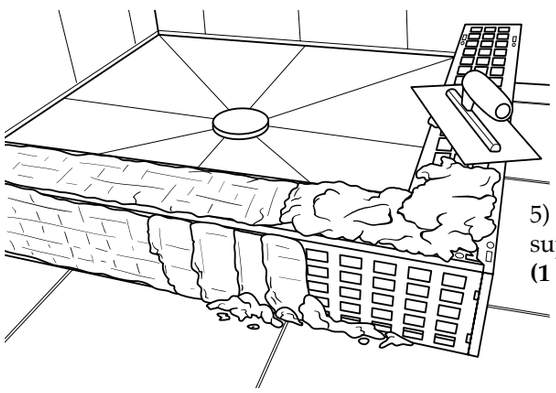

5) Rellene y compacte con lodo los paneles laterales y superiores del bordillo sujetado. **(1 parte de cemento Portland a 4 partes de arena limpia.)**

(6) Deje secar el bordillo durante la noche y use un mortero modificado de látex para colocar la baldosa.

Manufactured by:
MARK E INDUSTRIES
855 Dunbar Ave., Oldsmar, FL 34677
Línea de teléfono gratuita: 1-866-771-9470
http://www.goofproofshowers.com
e-mail: *info@markeindustries.com*

GARANTÍA DE POR VIDA - Mark E Industries, Inc. garantiza que los productos Kirb-Perfect® están libres de defectos en los materiales y la obra de mano. La garantía no cubre los daños ocasionados por un obvio mal uso, abuso o modificación. Repararemos o reemplazaremos sin cargo, a nuestro juicio, cualquier parte que pueda comprobarse defectuosa. La(s) parte(s) deben devolverse con el flete prepagado y con comprobante de compra.